

Product instruction manual  
A3 Pouch Laminating System  
Peak Pro - PP-330



Peak laminators have been designed to be user friendly, however we strongly recommend you take a few minutes to read through this manual to ensure correct operation.

Keep this manual safe for future reference.



Thank you for purchasing the Peak Pro PP-330. Peak laminators are designed to give you professional, high quality results, quickly and easily. Please take a few minutes to read through this important document as any **damage caused to your laminator by user error is not covered under warranty.**


## How to use your laminator

- 1) Carefully remove the laminator from all of its packaging and place it on a flat, level surface. Make sure you keep the original packaging somewhere safe (in case this is needed in the future).
- 2) Unpack the power cable and insert it into the power outlet at the back of laminator. Plug it in to a power socket. Press the Red POWER switch to turn the laminator on. The power light will illuminate.
- 3) Set the HEATER switch to ON.
- 4) Check that the FWD/REV (Forward and Reverse) switch is set to FWD (See diagram 1)
- 5) Refer to the temperature chart and set the laminator to the required temperature.
- 6) The laminator will now begin to heat. Once it has reached the set temperature, the green READY light will illuminate.
- 7) Place the document you are laminating inside the pouch, making sure that it is centrally positioned and that a small border (approx 5mm) is left around the edge. **If you are laminating cut-up pieces then you need to use a Lifejacket®. If you do not have one of these, ask your supplier.**
- 8) Once the document (or small pieces) are positioned in the pouch (and are not overlapping or touching each other), insert the prepared document into the laminator. Make sure you insert the SEALED EDGE FIRST and do not insert at an angle. The item will automatically feed through and appear the other end.  
**! Do not tug or pull the document as it comes out of the back of the laminator.**
- 9) To turn off the laminator after use, set the HEATER switch to OFF and allow the laminator to still run for 5 minutes (you will hear the rollers turning). This allows the laminator to cool down and it is then safe to turn the POWER switch OFF after this time.


It is important that you watch your document as you laminate in case of jamming. If your laminating appears to be jamming, press the REVERSE switch and gently ease the document back out.



Don't overlap

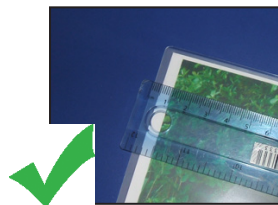


Leave a 5mm border

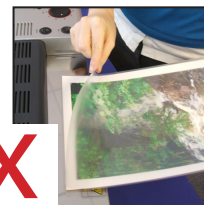

Don't laminate open end first

## Parts and Features

Diagram 1

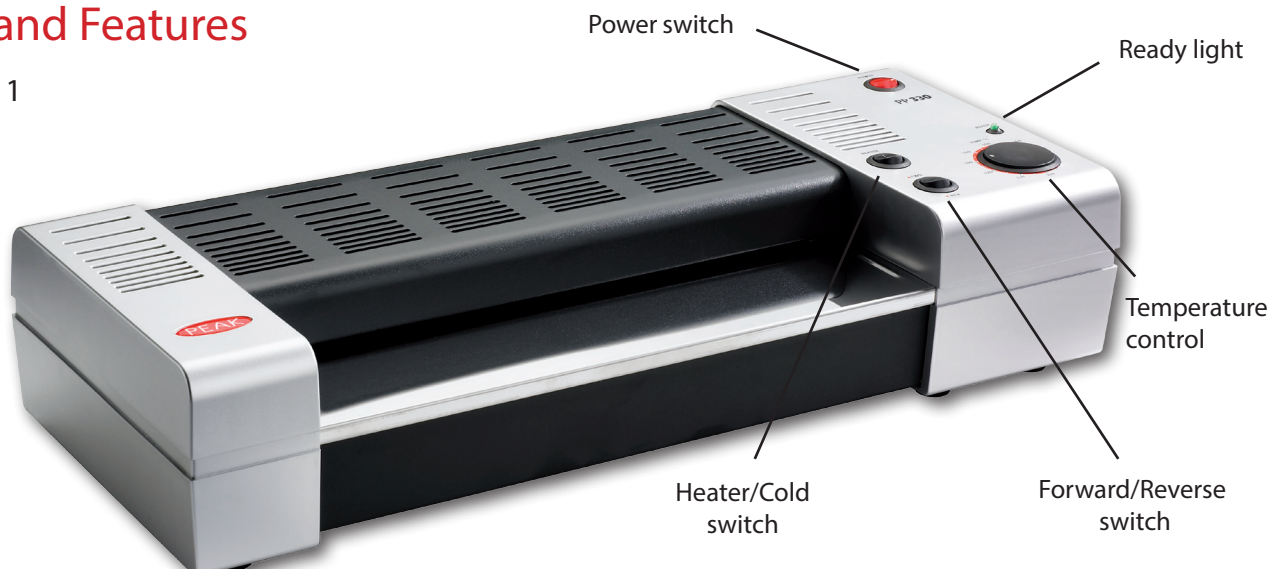



Never laminate cut up pieces without using a Lifejacket® or you risk jamming and damaging your laminator (this will not be covered under warranty)



## What is a 'Lifejacket®'?

The Lifejacket® is a highly durable patented product made from Teflon® that should be used when laminating cut-up, odd shaped pieces (such as shapes, letters, signs as show above) to prevent damage to your laminator and potential jamming.

### Why use a Lifejacket®?

- Protect your laminator from jamming
- Extend the life of your laminator by using the Lifejacket® - stops adhesive seeping onto the rollers
- Eliminate repair bills as this product keeps your laminator working at an optimum level
- Available in A4, A3 and A2 sizes to protect documents of all sizes

Ask your supplier for more details.

## Temperature control

Temperature control is designed for laminating pouches and documents of varying thickness. Thicker objects need more heat. The table below gives an indication of the correct temperature setting required. **Please note this is a guide only. Other factors can affect the laminator such as room temperature and the thickness of document being laminated.**

Laminating pouch thickness	Paper Type	Approx temperature (°C)
150 to 200 micron total (75 + 75 per side up to 100 + 100 per side)	Copy paper (80gsm)	110-120
	Photo paper (120gsm)	115-120
	Card (200gsm)	115-125
250 to 360 micron total (125 + 125 per side up to 180 + 180 per side)	Copy paper (80gsm)	120-125
	Photo paper (120gsm)	125-130
	Card (200gsm)	125-130
360 micron (maximum) (180 + 180 per side)	Copy paper (80gsm)	130-140
	Photo paper (120gsm)	135-140
	Card (200gsm)	135-145

## Technical Specifications

<b>Laminating speed:</b>	560mm/minute
<b>Laminating width:</b>	320mm
<b>Maximum pouch thickness:</b>	360 micron
<b>Laminating temperature:</b>	100-160°C
<b>Warm up time:</b>	5 minutes
<b>Power supply:</b>	AC 100, 110, 220 240V/50Hz, 60Hz
<b>Power consumption:</b>	450W
<b>Dimensions:</b>	535 x 215 x 113mm
<b>Weight:</b>	8.8kgs
<b>Warranty:</b>	2 years

## Safety!

- Always remember to switch your pouch laminator off after use. Leaving it on for long periods can cause damage to the laminator and is a health and safety hazard
- Always put the sealed end of the pouch or Lifejacket® into the laminator first
- **NEVER** laminate metal objects such as keys or coins
- **NEVER** use the laminator near water and do not leave the laminator next to a hot area such as a radiator
- Always wrap the power cord around safely after use and do not leave it dangling where it could cause an accident
- Do not allow children to use the laminator, unless supervised
- If your laminator stops working, do not try to fix it yourself by disassembling the machine. Contact your supplier for advice
- Do not operate the laminator if the power cable is damaged in any way
- Do not use this appliance for anything other than it's intended purpose

## FAQ'S

### **My document has come out cloudy - what does this mean?**

This means that the temperature setting is not quite hot enough. Try increasing the temperature by 5°C and try again as applying more heat should fix the problem.

### **My document has come out wavy - what does this mean?**

If the document comes out with a wavy finish the temperature is set too high. Decrease the temperature by 5°C and try again. If you have an important document to laminate such as a photograph, it is always good to try a test document first to ensure you have the laminator at the perfect temperature.

## Warranty & Incorrect Use

### IMPORTANT INFORMATION

Your laminator should reach you in perfect condition, however please retain all original packaging once you have unpacked your laminator in case you need to return it. If your laminator arrives damaged or faulty in anyway, this must be reported to your supplier immediately. If you send your laminator back for repair under warranty at any time, then the warranty may be void if the laminator is not packaged correctly and as a result is damaged in transit. Unauthorised repair or attempts to service the unit will invalidate the warranty.

Your Peak Pouch Laminator includes a 2 year warranty on defective parts under normal operating conditions. THIS DOES NOT COVER any jams, misfeeds or wrap arounds caused by operator error and you will be liable for the repair costs (including delivery charges). The warranty does not cover the heated rollers. The warranty is for a period of two years from the date of purchase by the original consumer. To protect the rollers we recommend using our Lifejackets®

Please note that attempting to laminate any type of unsuitable documents (for example multiple cutouts, textiles, food matter, documents exceeding the maximum thickness or documents too large or small for the pouch) may result in jamming. Damage caused by incorrect use or failing to follow the instructions are not covered within the warranty.

